

# EasyTreat – User instructions

**1** Turn on the power for the device from the switch on the right.

**2** Insert a treat-bar that is min. 10 cm in length fully into the device and close the plug.

The device is now ready for use

**3** Press the Treat button  
When the device has been inserted with the first / initial treat bar, the device will deliver the first treat within 20-30 seconds after pushing the button. Subsequent treats will be delivered within about 3 seconds after the button is pressed.

## Usage

If you want to change the treat bar, or remove it from the device, press the reject button.

When the treat-bar is finished, there will be a small piece left of about 1 cm in size in the device. Upon inserting a new treat bar, the device will deliver the leftover piece the next time a treat is delivered.

## Battery

The battery charge status can be checked by pressing the battery - handle / button. It is advised to charge the battery of the device when the status is indicated by two leds or less. It takes about 10 hours to fully charge the battery. Upon connecting the charging cord, the charging light lights and when the battery has been fully charged the light turns off.

## Problem situations

If the treat-bar is too hard, the device will first try two times and then reject it by pushing the bar out. For example, a dental care stick is too hard for the EasyTreat-device. If a non-suitable bar doesn't come out automatically, you can try and carefully pull it out.

If the "ERROR"-light is lit, that is an indication that the USB-charging device voltage or power is not suitable.

## Good to know

Upon changing the treat-bar or if an error condition is detected, the device may give a bigger treat piece than normally.

A treat bar usually remains usable in the device for a few weeks.

## Device beeps


**Slow beep:** you are running low on the treat-bar or the batteries voltage is low.

**Fast beep:** the inserted treat-bar is too hard or there is a malfunction in the device.

## Important!

The EasyTreat-device is not suitable to be used by children. Foreign objects may not be inserted into the device, only suitable dog treat-bars.

© Oy Plexijaloste Ab, we reserve the rights to make changes.

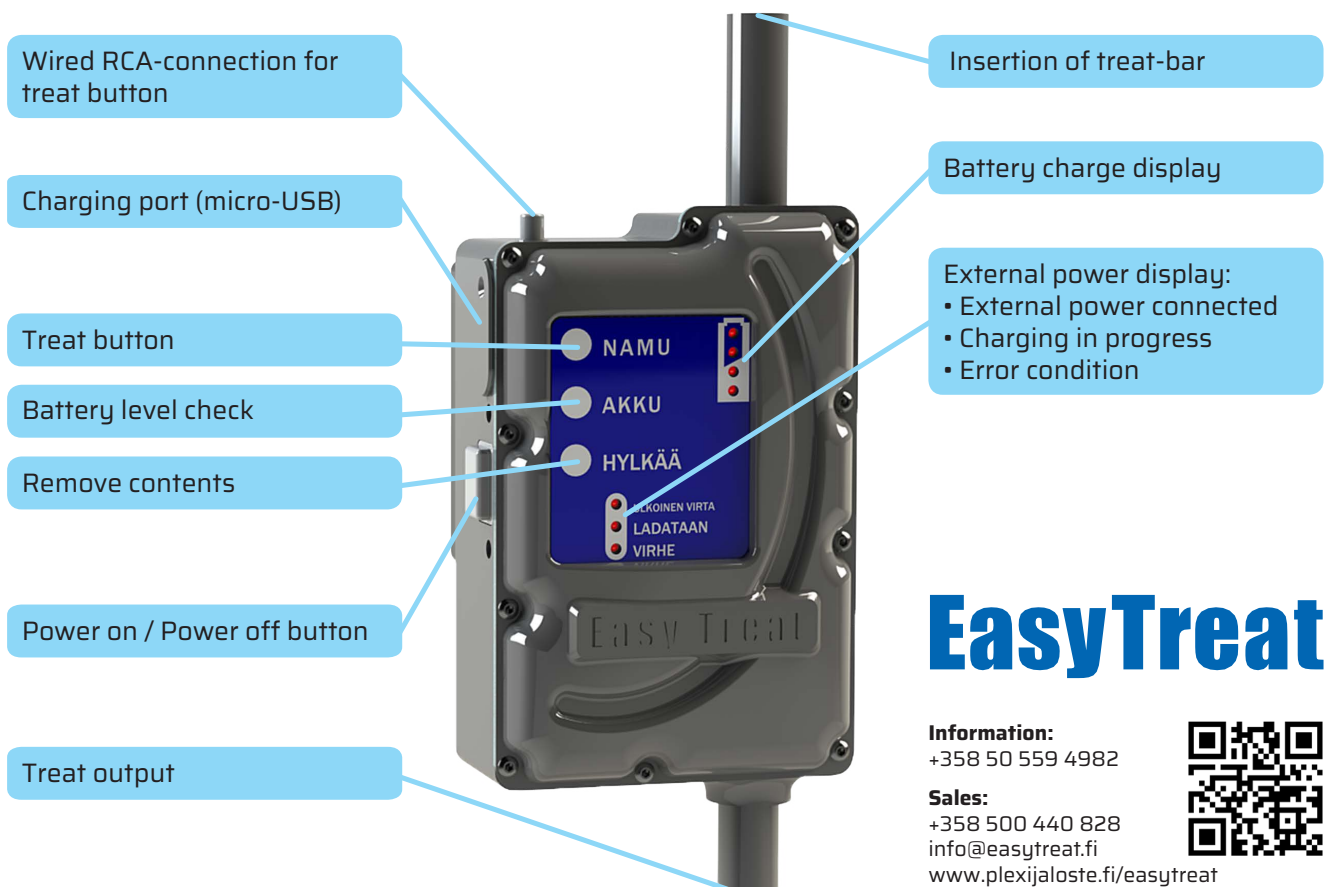

# EasyTreat

**Information:**  
+358 50 559 4982

**Sales:**  
+358 500 440 828  
info@easytreat.fi  
www.plexijaloste.fi/easytreat

